




Water Feature

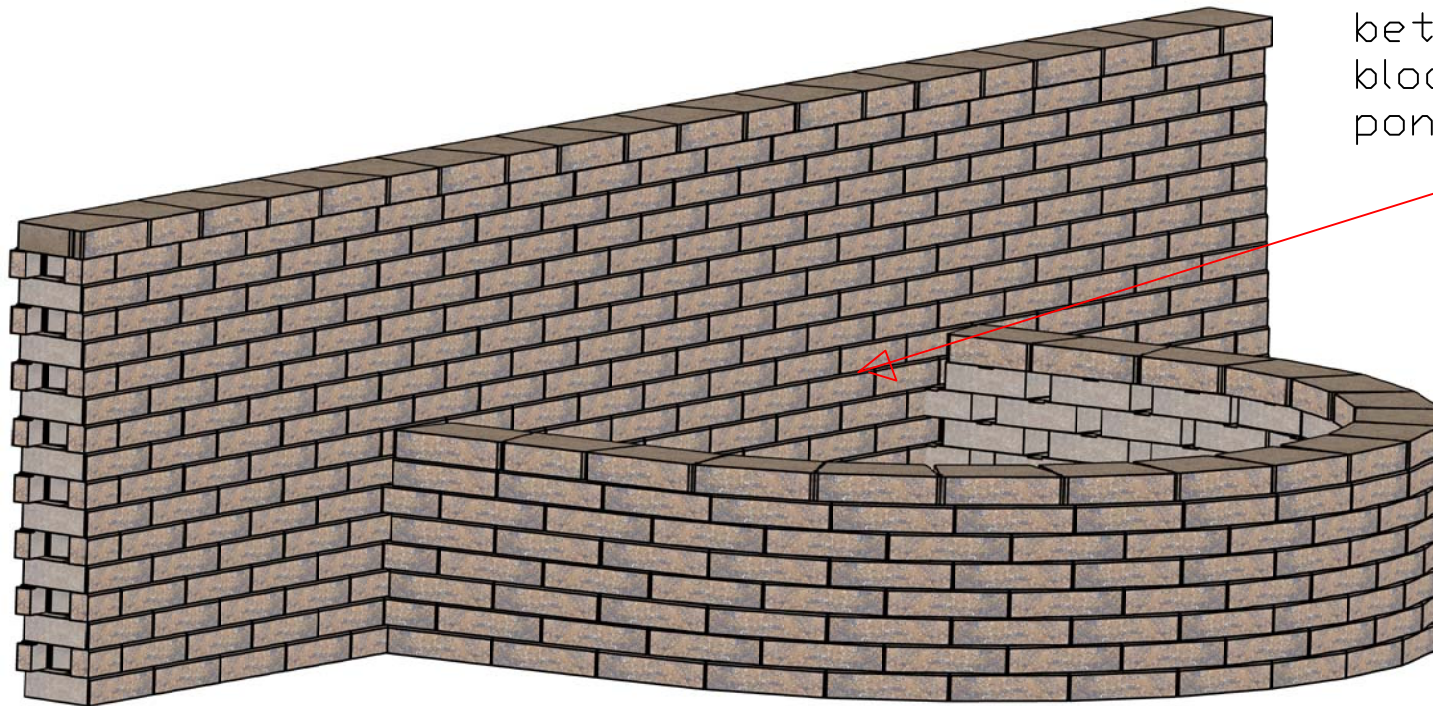

Place pond liner between last course of block and cap. Pond liner must go between courses of block in wall behind pond.

Build wall and pond course by course filling behind wall as well as cores of block until you reach the last course in pond before cap. The pond liner will need to be partially filled with water before securing the cap. This will take out any slack in the liner. Cut liner to fit 6" inside top course of pond wall. This will allow for the liner to be adhered to the block with outdoor construction adhesive. The cap will be placed and adhered to both the block and the pond liner with the same adhesive.